



Audi | SEAT | Skoda | Volkswagen | FIAT



Fig. 1: Self-adjusting clutch with clutch locking piece



Fig. 2: Install clutch



Fig. 3: Unscrew locking piece

NOTICE

Do not remove the locking part prior to installation of the cover assembly (Fig.1).

- Install cover assembly with disk and special centering arbor onto the flywheel (Fig.2).
- Remove locking piece after proper installation.
The diaphragm spring might lightly snap (Fig.3).
- Remove special centering arbor.



www.aftermarket.zf.com/serviceinformation